

# SWITCH-PROS®



## Can-Am Maverick R '24-26

### Center Console Mount for Switch-Pros® RCR-Force® 12



Kit Includes	
Center Console Mount (1)	6-32 x 3/16" Socket Screw (4)

Required Tools
7/64" Allen Wrench

#### Installation:

1. Remove the rocker switch cover plate from the dash. Carefully pry downwards from the top edge.

**Note:** You do not need to remove the whole dash piece to install this mount.


2. Route the Comm Cable to the back of the dash.




3. Attach the Switch Panel to the Center Console Mount using the 6-32 x 3/16" Socket Screws (4) provided and a 7/64" Allen Wrench.



7/64" Allen Wrench (4)

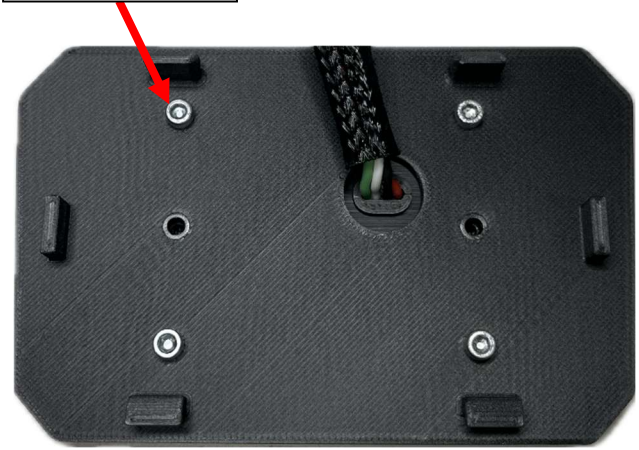

4. Plug the Switch Panel harness into the Comm Cable. Attach the Center Console Mount to the dash of the vehicle. Hook the bottom tabs in first, then push the top of the plate until the mount snaps into place.

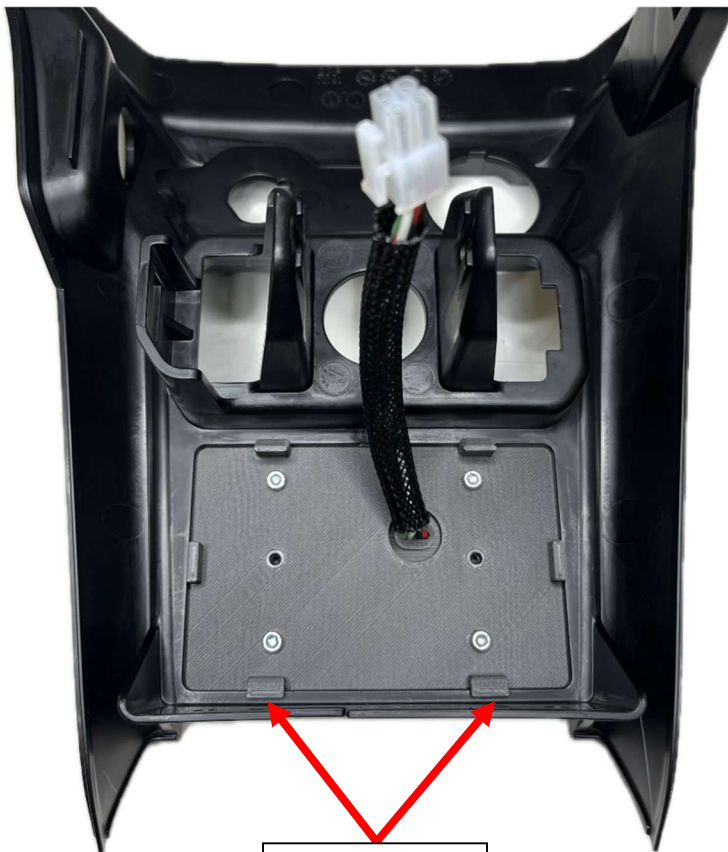

STEP 1:  
Hook Bottom  
Tabs



STEP 2:  
Push Top until  
Mount Snaps  
into Dash