

SWITCH-PROS®



Can-Am Maverick R '24-'25 Dash Mount for Switch-Pros® RCR-Force®12



Kit Includes	
Dash Mount (1)	6-32 x 3/16" Socket Screw (4)

Required Tools
7/64" Allen Wrench

Installation:

1. Remove the rocker switch cover plate from the dash. Carefully pry downwards from the top edge.

Note: You do not need to remove the whole dash piece to install this mount.


2. Route the Comm Cable to the back of the dash.




3. Attach the Switch Panel to the Dash Mount using the 6-32 x 3/16" Socket Screws (4) provided and a 7/64" Allen Wrench.



7/64" Allen Wrench (4)

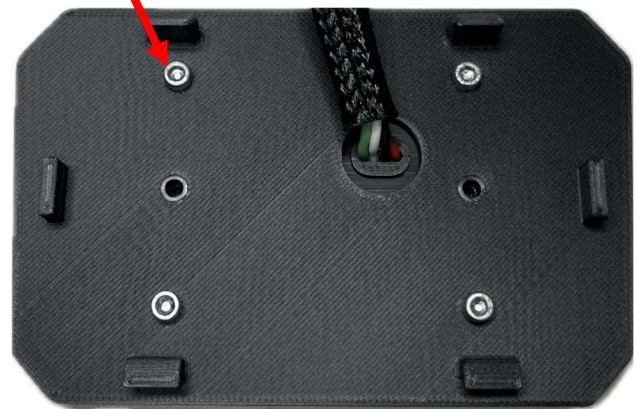

4. Plug the Switch Panel harness into the Comm Cable. Attach the Dash Mount to the dash of the vehicle. Hook the bottom tabs in first, then push the top of the plate until the mount snaps into place.

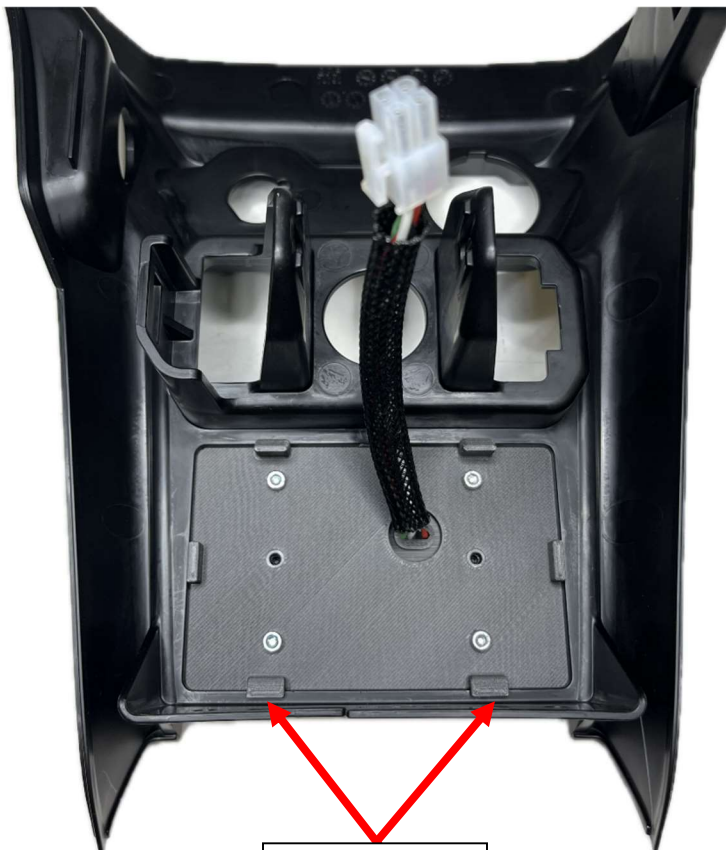

STEP 1:
Hook Bottom
Tabs



STEP 2:
Push Top until
Mount Snaps
into Dash